

# Door Protect User Manual



**Door Protect** is a wireless door and window opening detector designed for indoor use. It can operate up to 7 years from a pre-installed battery and capable to detect more than one million openings. Door Protect has a socket for connecting an external detector.


The functional element of Door Protect is a sealed contact reed relay. It consists of ferromagnetic contacts placed in a bulb that form a continuous circuit under the effect of a constant magnet.

Door Protect operates within the Ajax security system, connecting via the protected Jeweller radio protocol. Communication range is up to 1,200 m in the line of sight. Using the uartBridge or ocBridge Plus integration modules, Door Protect can be used as part of third party security systems.

The detector is set up via Ajax apps for iOS, Android, mac OS and Windows. The app notifies user of all events through push notifications, SMS and calls (if activated).

The Ajax security system is self-sustaining, but the user can connect it to the central monitoring station of a private security company.

# Functional Elements

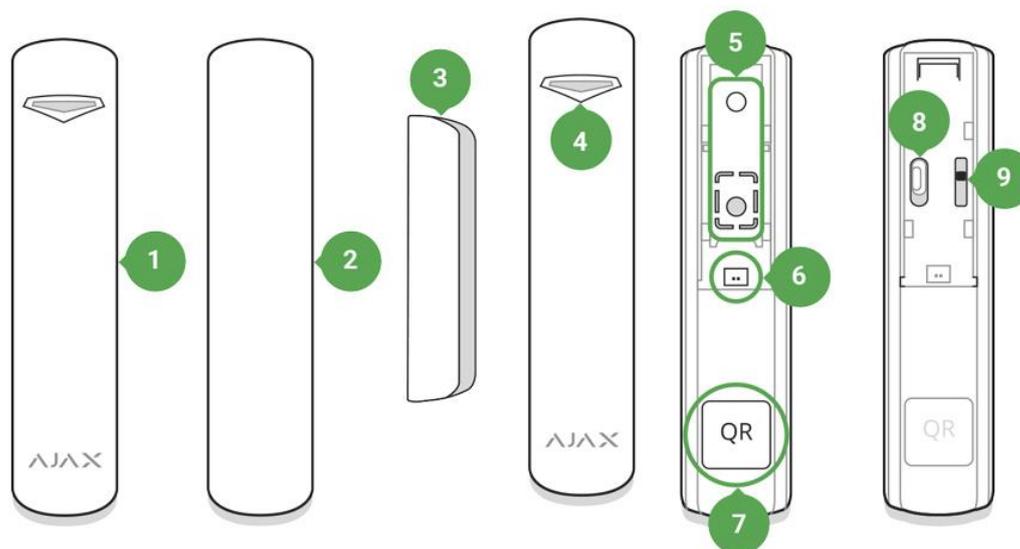

1. Door Protect
2. Big magnet
3. Small magnet
4. LED indicator
5. Smart Bracket attachment panel (perforated part is required for actuating the tamper in case of any attempt to dismantle the detector. Don't break it out!)
6. External detector connection socket
7. QR code
8. Device switch
9. Tamper button

# Operating Principle

Door Protect consists of two parts: the detector with a sealed contact reed relay, and the constant magnet. Attach the detector to the door frame, while the magnet can be attached to the moving wing or sliding part of the door. If the sealed contact reed relay is within the coverage area of the magnetic field, it closes the circuit, which means that the detector is closed. The opening of the door pushes out the magnet from the sealed contact reed relay and opening the circuit in such a way, the detector recognizes the opening.

A small magnet works at a distance of 1 cm, and the big one — up to 2 cm.

After actuation, Door Protect immediately transmits the alarm signal to the hub, activating the sirens and notifying the user and Security Company.

## Pairing the Detector

Before starting pairing:


1. Following the hub instruction recommendations, install the [Ajax app](#) on your smartphone. Create an account, add the hub to the app, and create at least one room.
2. Switch on the hub and check the internet connection (via Ethernet cable and/or GSM network).
3. Make sure that the hub is disarmed and does not update by checking its status in the app.

Only users with administer rights can add the device to the hub.


How to pair the detector with the hub:

1. Select the **Add Device** option in the Ajax app.

2. Name the device, scan/write manually the **QR Code** (located on the body and packaging), and select the location room.



3. Select **Add** — the countdown will begin.
4. Switch on the device.



For detection and pairing to occur, the detector should be located within the coverage area of the wireless network of the hub (at a single protected object).



The request for connection to the hub is transmitted for a short period of time at the moment of switching on the device.

If pairing with the hub failed, switch off the detector for 5 seconds and retry it.

If the detector has paired with the hub, it will appear in the list of devices in the Ajax app. The update of the detectors statuses in the list depends on the detector ping interval set in the hub settings. Its default value is 36 seconds.

# States

1. Devices
2. Door Protect

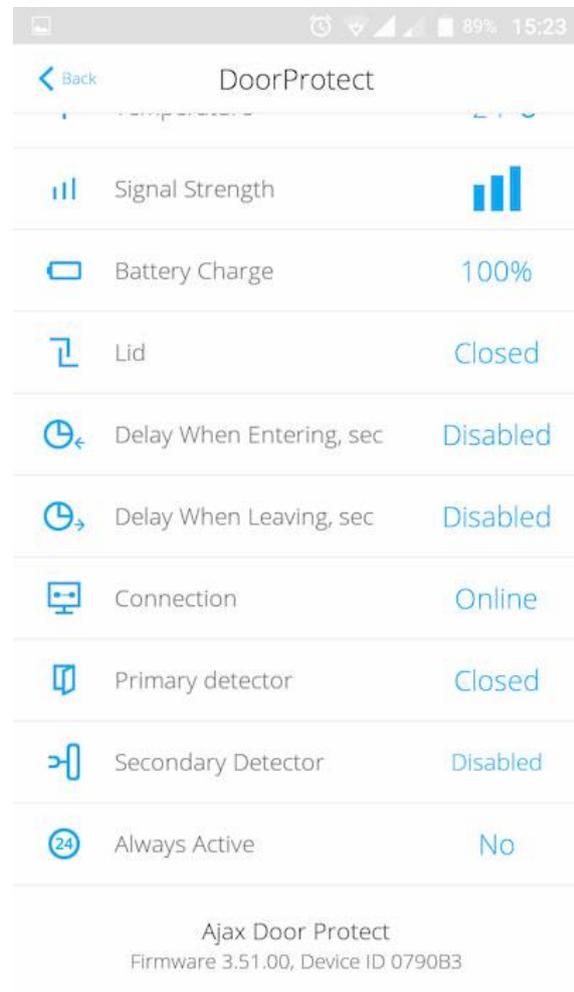
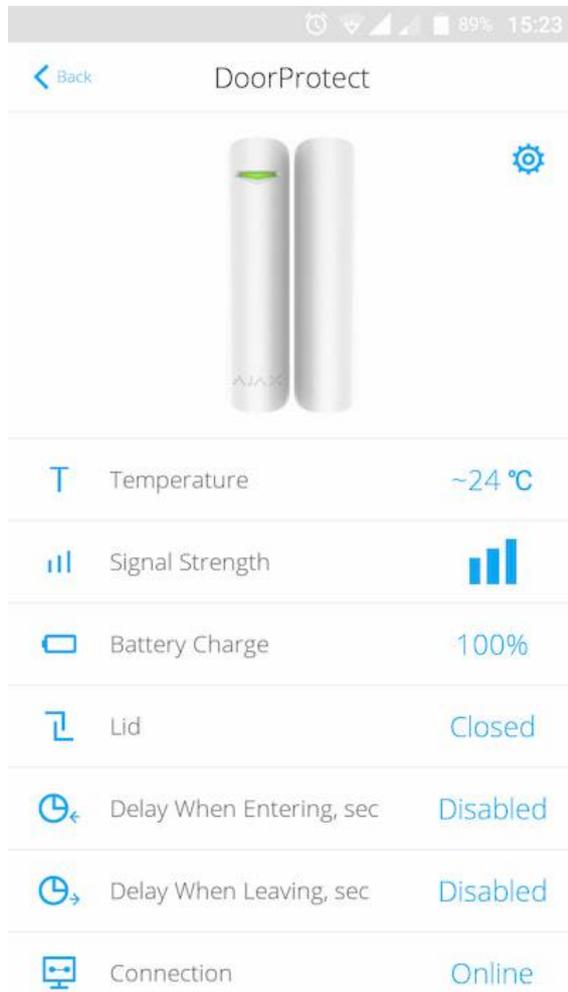


Parameter	Value
Temperature	The temperature of the detector. The temperature is measured on the processor and changes gradually
Jeweller Signal Strength	The signal strength between the hub and the detector
Connection	The connection status between the hub and the detector
Battery Charge	The battery level of the detector, displayed in increments of 25%

Lid	The tamper state, which reacts to detachment or damaging of the detector body
Delay When Entering, sec	The delay time when entering
Delay When Leaving, sec	The delay time when exiting
Routed Through Rex	Indicates if the detector is routed through a radio signal range extender
Primary Detector	The primary detector status
Secondary Detector	The status of the external detector connected to Door Protect
Always Active	If active, the detector is always in the armed mode
Firmware	The detector firmware version
Device ID	The device identifier

## Setting Up

1. Devices
2. Door Protect
3. Settings

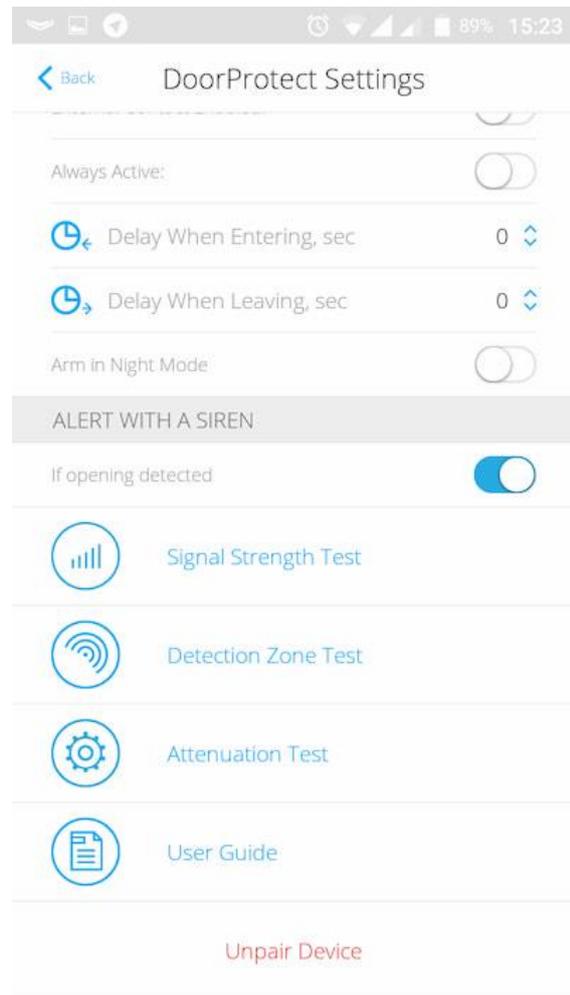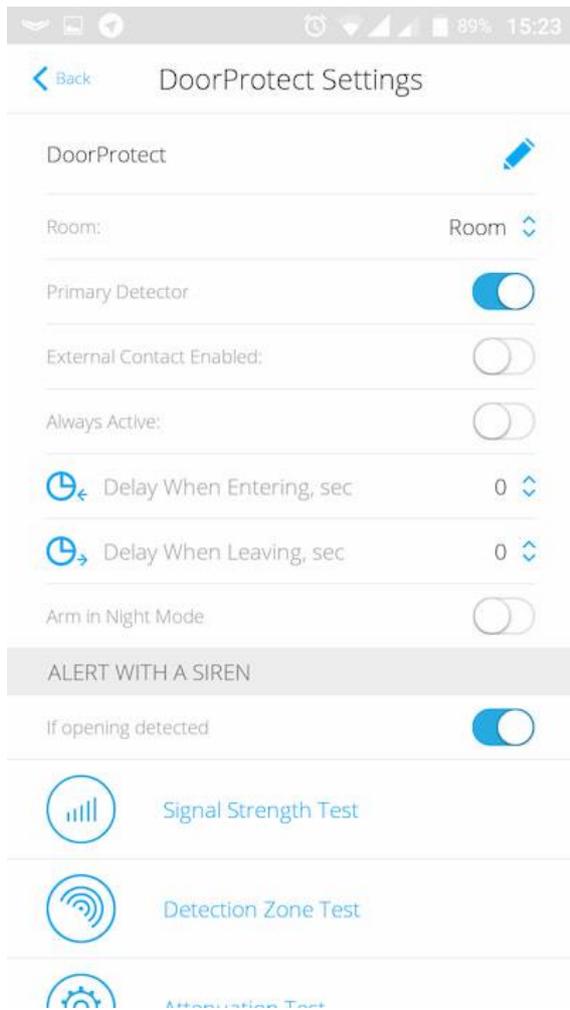

Setting	Value
First field	The detector name, can be edited
Room	Selecting the virtual room to which the device is assigned
Delay When Entering, sec	Setting the delay time when entering
Delay When Leaving, sec	Setting the delay time on exit
Delays in night mode	Delay turned on when using night mode
Arm in Night Mode	If active, the detector will switch to the armed mode when using the night mode
Primary Detector	If active, Door Protect primarily reacts to opening/closing
External Contact Enabled	If active, the detector registers external detector alarms

Always active	If active, the detector always registers opening/closing
Activate the siren if the door or window is open	If active, Home Siren and Street Siren are activated when the opening detected
Activate the siren if an external contact opened	If active, Home Siren and Street Siren are activated during an external detector alarm
Jeweller Signal Strength Test	Switches the detector to the signal strength test mode
Detection Zone Test	Switches the detector to the detection area test
Attenuation Test	Switches the detector to the signal attenuation test mode (available for detectors with <b>firmware version 3.50 and later</b> )
User Guide	Opens the detector User Guide
Un pair Device	Disconnects the detector from the hub and deletes its settings

## Indication

Event	Indication	Note
Switching on the detector	Lights up green for about one second	
Detector connecting to the hub, ocBridge and uartBridge	Lights up for a few seconds	
Alarm / tamper activation	Lights up green for about one second	Alarm is sent once in 5 seconds
Battery needs replacing	During the alarm, it slowly lights up green and slowly goes out	Replacement of the detector battery is described in the Battery Replacement manual

# Functionality Testing

The Ajax security system allows conducting tests for checking the functionality of connected devices.

The tests do not start immediately but within 36 seconds by default. The starting time depends on the ping interval (the paragraph on “**Jeweller**” settings in hub settings).

## Installing the Detector

### Selecting the location

Location of Door Protect is determined by its remoteness from the hub and presence of any obstacles between the devices hindering the radio signal transmission: walls, inserted floors, large objects located within the room.

Check the signal level at the installation location

If the signal level is low (one bar), we cannot guarantee stable operation of the security system. Take all possible measures to improve the quality of the signal! As a minimum, move the device — even 20 cm shift can significantly improve the quality of the reception.


If, after moving, the device still has a low or unstable signal strength, use the ReX Radio signal range extender.

The detector is located either inside or outside of the door case (window frame):

When installing the detector in the perpendicular planes (inside the case/frame), use the small magnet. The distance between the magnet and detector should not exceed 1 cm.


When positioning the parts of Door Protect in the same plane, use the big magnet. Its actuation threshold — 2 cm.

Attach the magnet to the moving part of the door (window) to the right of the detector. If necessary, the detector may be overturned or positioned horizontally.

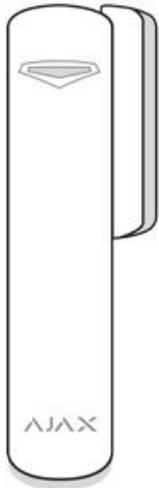

## Installing the detector

Before installing the detector, make sure that you have selected the optimal location and it complies with the guidelines of this manual!

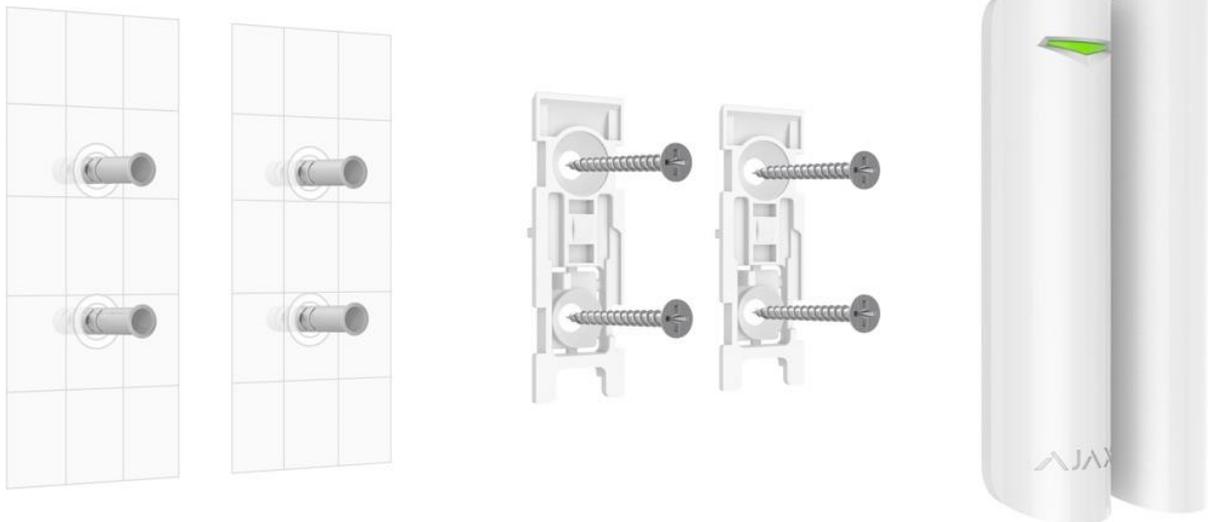

1. Fix the Smart Bracket attachment panels and the magnet using the bundled screws. If using any other attachment hardware, make sure that they do not damage or deform the panel.

Double-sided adhesive tape may be only used for temporary attachment. The tape will run dry in the course of time, which may result in falling of Door Protect and actuation of the security system. Furthermore, the device may fail from a hit.

2. Put the detector on the attachment panel. As soon as the detector is fixed in Smart Bracket, it will blink with a LED signalling that the tamper is closed.

If the light indicator do not blink after installing in Smart Bracket, check the status of the tamper in the Ajax app and then the fixing tightness of the panel.

If the detector is torn off from the surface or removed from the attachment panel, you will receive a notification.

3. Put the magnet on the attachment panel.

**Do not install the detector:**

1. outside the premises (outdoors);
2. nearby any metal objects or mirrors causing attenuation or interference of the signal;
3. inside any premises with the temperature and humidity beyond the permissible limits;
4. Closer than 1 m to the hub.

## Detector Maintenance and Battery Replacement

Check the operational capability of the Door Protect detector on a regular basis.

Clean the detector body from dust, spider web and other contaminations as they appear. Use soft dry napkin suitable for equipment maintenance.

Do not use any substances containing alcohol, acetone, gasoline and other active solvents for cleaning the detector.

The battery lifetime depends on battery quality, actuation frequency of the detector and ping interval of the detectors by the hub.

If the door opens 10 times a day and the ping interval is 60 seconds, then Door Protect will operate up to 7 years from the pre-installed battery.

Setting the ping interval of 12 seconds, you will reduce the battery life to 2 years.

If the detector battery is discharged, you will receive a notification, and the LED will smoothly light up and go out, if the detector or tamper is actuated.

## Tech specs

Sensor	Sealed contact reed relay
Detector actuation threshold	1 cm (small magnet) 2 cm (big magnet)
Tamper protection	Yes
Socket for connecting wire detectors	Yes, NC
Frequency band	868.0 – 868.6 MHz or 868.7 – 869.2 MHz depending on the region of sale
Compatibility	Operates with Hub, Hub Plus, Hub 2, ReX, ocBridge Plus, uartBridge
Maximum RF output power	Up to 20 mW
Modulation	GFSK
Radio signal range	Up to 1,200 m (any obstacles absent)
Power supply	1 battery CR123A, 3 V
Battery life	Up to 7 years
Operating temperature range	From -10°C to +40°C
Operating humidity	Up to 75%
Dimensions	Ø 20 × 90 mm

Weight	29 g
Certification	Security Grade 2, Environmental Class II in conformity with the requirements of EN 50131-1, EN 50131-2-6, EN 50131-5-3

## Complete Set

1. Door Protect
2. Smart Bracket mounting panel
3. Battery CR123A (pre-installed)
4. Big magnet
5. Small magnet
6. Outside-mounted terminal clamp
7. Installation kit
8. Quick Start Guide

## Warranty

Warranty for the “AJAX SYSTEMS MANUFACTURING” LIMITED LIABILITY COMPANY products is valid for 2 years after the purchase and does not apply to the pre-installed battery.

If the device does not work correctly, you should first contact the support service — in half of the cases, technical issues can be solved remotely!